


User Guide (For TRI-1515, TRI-1818, TRI-2121 & TRI-2424)

TRI

Tripod Screen

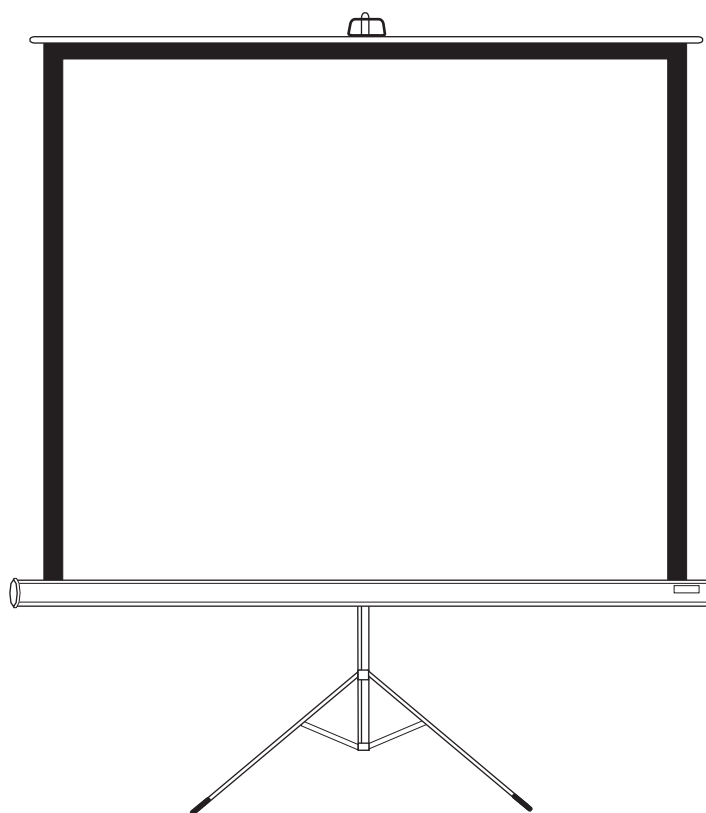

Important Notes:

All screens are thoroughly inspected and fully tested operational in factory.

We accept no liability whatsoever for any losses due to improper operation, or any unauthorized alternation.

All trademarks contained in this installation guide are the property of their respective owners.

To Setup Screen:

1. Hold case with one hand, with legs pointing downwards, pull legs outward to set on floor.
2. Press release catch at top center tube, raise extension rod.
3. Swing screen casing to horizontal position. Place screen hanger on hook.
4. Release thumb tension lock on handle and raise casing to desired height.
5. Raise extension rod with fabrics surface to desired screen height.
6. For maximum screen height, raise handle and then extension rod to top position

To Keep Screen:

1. Hold extension rod firmly and press release catch. Gently lower the rod to its lowest position.
2. Unhook fabrics surface and reroll into casing.
3. Swing casing into vertical position.
4. Press release catch and push hanger into end cap slot.
5. Lift the whole screen from floor.
Close tripod legs and lock by pressing each leg until engaged with tripod binding arms.